

# Magne Timer Control Module Operation

## To Connect the Timer

1. Connect the USB cable to the port at the bottom of the timer.
2. Connect the 4 pin circular connector to the remote jack on the rear of the induction power supply.
3. If needed, plug in the remote on/off actuator cable to the port on the bottom of the timer module. (remote selector switch inside the timer enclosure must be changed).
4. Turn on the Magne power supply. The 4 digit LED display on the timer module will turn on.

## To Set the Timer

1. Press the SET button on the top right. This will shift the decimal point to indicate the numeral that is to be set.
2. Press the ENTER button to set the value for that numeral. Keep pressing the ENTER button until you get to the desired value. Then press the SET button to enter that value and go to the next digit. If no value is to be set for that digit, leave it at zero and press the SET button to go the next digit.
3. Press ENTER again to set the value for the selected digit. Then press SET again to enter that value.
4. Continue until the value for all 4 digits has been set.
5. Press SET after all digits have been set. The display will flash once. This indicates that the desired value has been entered.

## Turn on heating

1. Press and release the black HEAT ON button to start heating. Heating will turn on and the timer will count down to zero. When it reaches zero heating will stop and the timer will reset. Press the red OFF button if you want to stop heating before the timer times out.
2. If the remote actuator is to be used, momentarily close the red and black wires at the end of the cable.

